



GRONOMICS® “MINIMAL ASSEMBLY REQUIRED”

PLANTER BENCH

Parts Check List and Assembly Instructions

STEP I

A) Unpack all of the parts and organize them in ‘like’ stacks. Please read the instructions in its entirety before beginning assembly.

You should have:

Model #EPB24-82 & Model #EPB24-82S

QUANTITY	PART DESCRIPTION	PART #
BOX 1 of 2		
6	4" x 4" x 30" Post w/13" Dovetail Depth	7009
1	4" x 4" x 36" Three Sided Dovetail Corner Post (Left)	7003-Lt
1	4" x 4" x 36" Three Sided Dovetail Corner Post (Right)	7003-Rt
1	21" x 5½" x 1" Side Rail w/Double Cleat (Left)	7004-Lt
1	21" x 5½" x 1" Side Rail w/Double Cleat (Right)	7004-Rt
2	21" x 5½" x 1" Side Rail w/Cleat	7005
4	21" x 5½" x 1" Side Rail	7007
2	14½" x 5½" x 1" Side Rail	1450
4	14½" x 2½" x 1" Narrow Center Side Rail	1451
4	15½" x 5½" x 1" Bottom Board	1550
2	15½" x 4½" x 1" Corner Notched Bottom Board	1551
8	4½" x 4½" x 1½" Post Cap	3100
2	18" x 34" Fabric Liner	2002
BOX 2 of 2		
1	Planter Bench (pre-assembled)	7110
3	45" x 5½" x 1" Side Rail (One w/Logo)	4501, 4501L
4	21" x 2½" x 1" Narrow Center Side Rail	7006
6	14½" x 5½" x 1" Side Rail	1450
2	15½" x 4½" x 1" Corner Notched Bottom Board	1551
6	3" Screws	7008
Packaged & Inspected by: _____ Date _____		



GRONOMICS® “MINIMAL ASSEMBLY REQUIRED”

STEP II

- A) Start by standing up the two 4" x 4" x 36" 3-sided dovetail corner posts with arched dovetail slot facing toward center.
- B) Slide the three 45" x 5½" x 1" side rails into the posts to make the backrest. Placing the 45" x 5½" x 1" side rail with logo on top.
- C) Stand the six 4" x 4" x 30" posts w/13" dovetail depth in position.
- D) Slide the 21" x 5½" x 1" side rail w/double cleat from the back center posts into the two front 4" x 4" x 30" post. With the shorter cleat facing toward the center of bench. Slide the 21" x 5½" x 1" side rail w/cleat to connect the outer two 4" x 4" x 30" posts. (see figure 1 and 2)

STEP III

- A) Slide the 14½" x 5½" x 1" side rails, followed by the 14½" x 5½" x 1" narrow center side rail and the last 14½" x 5½" x 1" side rails between the posts to complete the outer planter boxes. (see figure 2)
- B) Place the two 15½" x 4½" x 1" corner notched bottom boards on the end cleats. Make sure the corner cut-out notches are in the corners.
- C) Carefully remove the screw covers that are protecting the cap screws. Place the cap on the center of the screw utilizing the pre-drilled hole in bottom of the cap. Do not over tighten. (see figure 4)

STEP IV

- A) Place the planter bench seat in position. To reinforce the bench use the six screws underneath the bench in the pre-drilled holes. (see figure 3)
- B) Place the two fabric liners on the bottom of the planter boxes.


NOTE: If you need assistance with parts or have assembly questions, please contact Customer Service either via email at info@cwpmulch.com or phone at 763-753-7374

1-Year Warranty: All Gronomics® products are warranted against all manufacturing defects of material or craftsmanship for a period of ONE full year from date of purchase. Warranty does not cover cracking, damage caused by negligence, alterations or abuse in any way.

(Figure 1)



(Figure 2)

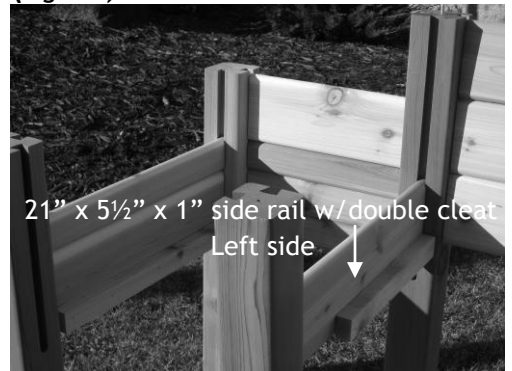

(Figure 3)



(Figure 4)

